



NOTE:
 SWING CHECK VALVES TO BE USED FOR RCV'S LOCATED AT TOE OF SLOPES.
 INSTALL AN ADDITIONAL LINE-SIZE CHECK VALVE 12"-24" ABOVE TOE OF SLOPE
 ON VERTICAL LATERAL PIPE.

SPRING CHECK VALVES TO BE USED FOR RCV'S LOCATED AT TOP OF SLOPES.

COMPLETELY FLUSH CLEAN ALL VERTICAL LATERAL LINES AFTER INSTALLATION OF BALL
 VALVES AND BEFORE INSTALLATION OF PRESSURE REGULATORS AND 1/2" LATERAL PIPE.

GPH IRRIGATION PRODUCTS

OFFICE: 866.582.9684

C LATERAL LINE EQUIPMENT
 SCALE: N.T.S.